


Assembly Instructions for the Butterfly Inlay Kit (Pg.1)



We're going to start by putting together the Blue Mountain butterfly. 5 pieces of Blackwood and 4 pieces of turquoise dyed basswood will be used. We'll start by sliding the brass tube from the pen kit into the green basswood barrel. Don't glue this in just yet. The first piece to put in place is Blackwood #2, then #1, #4 and #3. Secure these 4 pieces with a couple of the elastic bands that come with the kit. Next we'll install the turquoise pieces starting with #6, then #8, then #7 and #9. The last piece for this butterfly will be #5.

bands and then slide the brass tube checked to make sure all pieces them with thin CA. Flood the

Secure this with a couple more elastic out of the green barrel. After you've are well seated, permanently secure entire butterfly being careful not to get any of the glue in the recesses for the 2nd butterfly. See Fig.1.

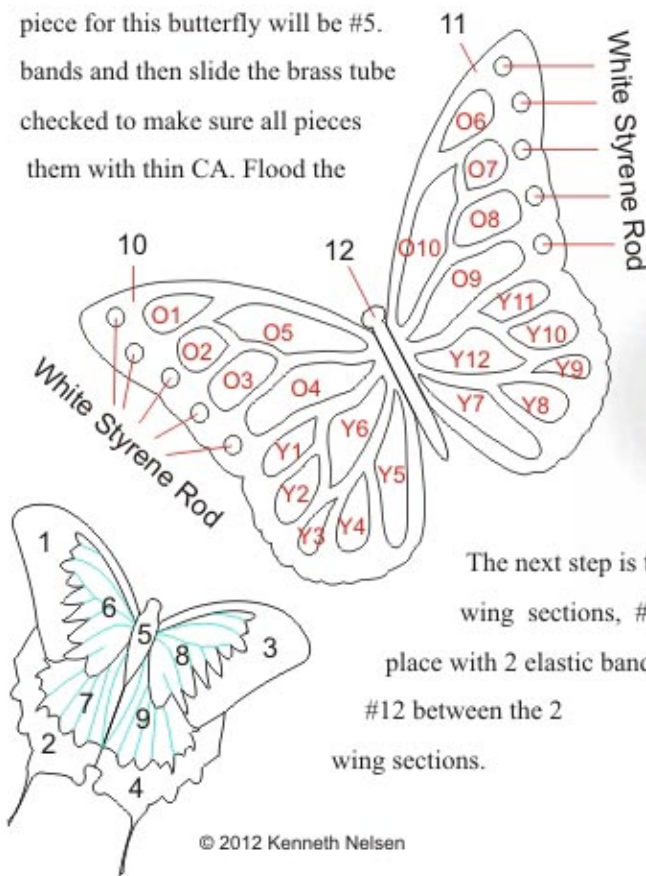

The next step is to position the black monarch butterfly wing sections, #10 and #11 into position and hold them in place with 2 elastic bands. Now insert piece #12 between the 2 wing sections.